

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS


PART NUMBER: CUS-DART
FOR: 2013 Dodge Dart
EFFECTIVE: October 8, 2012

INSTALLATION PACKAGE INCLUDES:

- A) 4 – M-6 x 1" Mounting Screws
- B) 4 – Lock Washers
- C) 4 – Flat Washers
- D) Driver's Side Template (Flip over for passenger side.)
- E) Adhesive Pads (*For an unpainted Sportwing®*)
- F) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Along the driver's side measure 8 1/4" from the tip of the trunk lid back the rear of the car and place mark with grease pencil. Repeat procedure on the other side. See Diagram A.

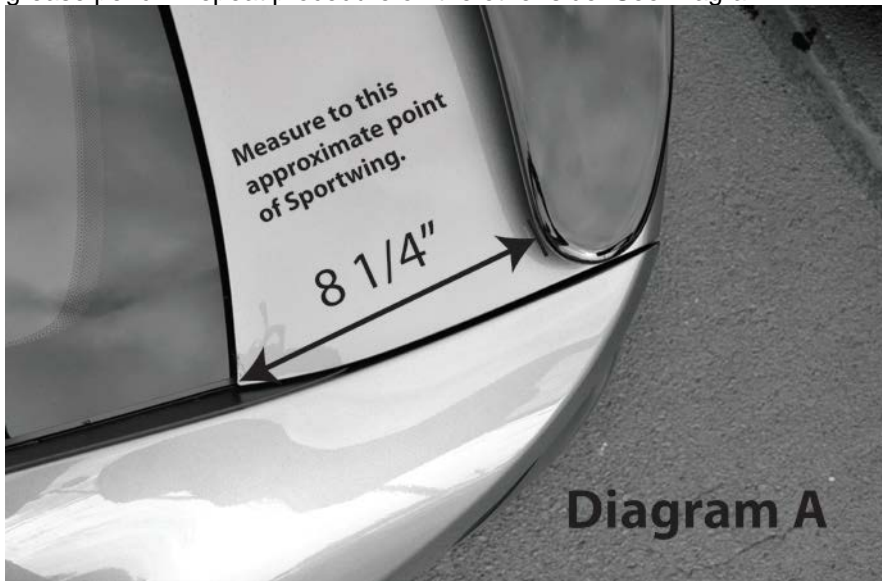

2. Leaving the paper on the bottom of the mounting feet, place the Sportwing® on the marks made in step #1 so that as you face the rear of the car, the front edge as shown of the Sportwing® rests on the mark. Center the Sportwing® from left to right. Using a yellow grease pencil, outline both mounting feet. Set the Sportwing® aside.



3. Starting on the driver's side, position the drivers' side template provided on the drivers' side outline made in step #2. Using a 1/8", or similar, drill bit, drill down through the exact center of the spots indicated on the drivers' side template, through the top panel only of the deck lid. Repeat procedure on passenger side by flipping drivers' side template over. Next, using a uni-bit, (**NOTE:** We recommend using a uni-bit for a cleaner cut.) you will need to open the four(4) 1/8" pilot holes that you have made from the templates to 3/8". De-burr if necessary.
4. Apply Zinc Chromate Primer or touch up paint to the edges of the four(4) 3/8" holes that you've drilled in the deck lid.
5. Close the trunk and remove the paper liner from the bottom of the mounting feet and place the Sportwing® back onto the marks you made in Step #2. Press lightly into place. Holding onto the Sportwing®, open the deck lid and check to see that the 3/8" holes in the deck lid align with the threaded sleeves of the mounting feet. If satisfied with alignment, press mounting feet firmly into place. If holes do not align, reposition the Sportwing® until satisfied with alignment.
6. Using mounting screws provided, with lock washers and flat washers, install screws into threaded sleeves of all four(4) mounting holes and partially tighten all four(4) of the mounting screws. After all four(4) are started tighten evenly until tight. **DO NOT OVER TIGHTEN.**
7. Clean up any metal shavings and you are done. If you have any questions, or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.