

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS


PART NUMBER: Fiesta11
FOR: 2011 & Up Ford Fiesta
EFFECTIVE: July 26, 2012

INSTALLATION PACKAGE INCLUDES:


- A. 3 – Factory Hole Cover Strips (Tape Pads) See diagram (A) on back.
- B. 4 – Small Round Gaskets
- C. 2 – Tape Gaskets for the Elongated Factory Holes
- D. 2 – Electrical Connectors
- E. 2 – M6 x 5/8" Mounting Screws
- F. 2 – Lock Washers
- G. 2 – Flat Washers
- H. 4 – SS Self-taping Screws (For outer most fastening area)
- I. 4 – SS Flat Washers
- J. 1 – Installation Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION


- 1) Open hatch and remove the six factory bolts holding factory spoiler in place, two on the ends and two underneath the factory plugs towards the center. Save two factory plugs for completion.
 - a) Next, pull factory Spoiler towards you just enough to remove factory plastic plugs that are fastened to the factory spoiler. **Note: Do not pull factory spoiler too far away from hatch because factory spoiler is fastened to brake light wires and window washer sprayer.**
 - b) Unhook rubber hose from factory spoiler.
 - c) Using wire cutters and cutting one at a time, cut the two wires approximately centered between the vehicle and the factory spoiler. **Note: Keep in mind the amount of wire you will need for the installation of the Sportwing®. DO NOT CUT TOO MUCH OFF!**
 - d) Set factory spoiler aside.
- 2) Set the Sportwing® onto the vehicle for a preliminary fitting. Remove when satisfied with fit.
- 3) Using the four (4) round tape gaskets provided, center them over each of the outer-most holes on the hatch.

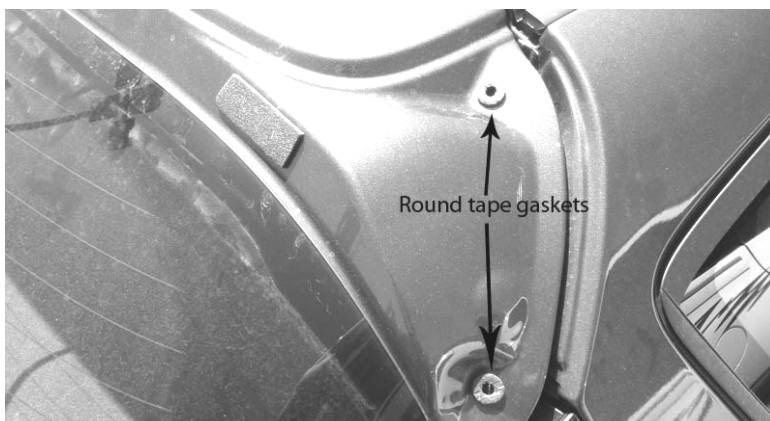

- a) Next using the one-sided strip pads, cover the factory holes that will not be used for the installation of the Sportwing®. There are three areas that will need to be covered. **See diagram below.**

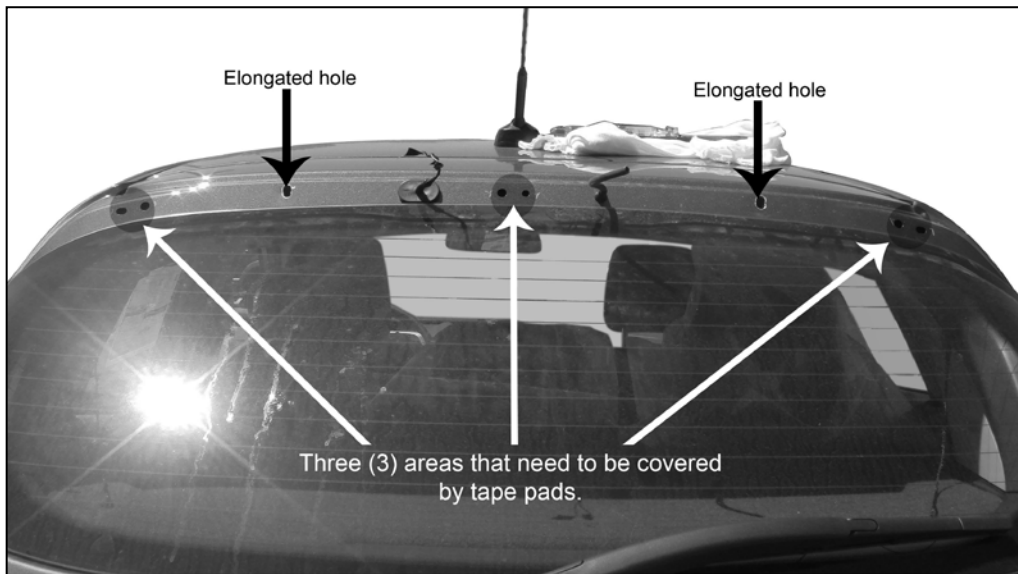

- 4) Using the red electrical connectors provided, connect the white (hot) wire of the Sportwing® to the blue wire connected to the hatch. Next, connect the white wire with the blue stripe (ground) wire to the black and purple wire of hatch. Have someone step on the brake to check electrical connections. Wrap electrical tape around connections so they do not rattle around inside Sportwing®. Using the provided window washer extension, connect fitted end into the factory rubber hose.
- 5) Now you will need to elongate the two factory holes on the third of each side. **See diagram below.**

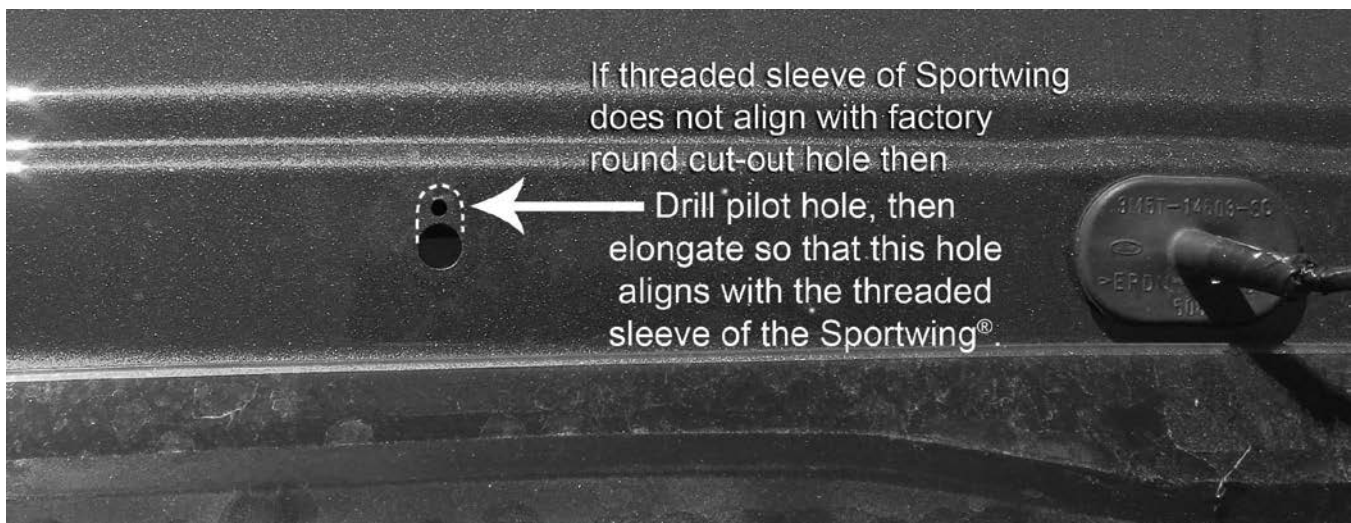

- 6) Place Sportwing® on hatch, making sure not to crimp the brake light wires or the sprayer feed hose. Fasten the two (2) central mounting screws just enough to hold wing in place. Then use the self-tapping screws with flat washers and start the four outer holes. Tighten the two center-most holes. **DO NOT OVER TIGHTEN!** Continue tightening outer-most holes to finish seating the wing.

You are done! If you have any questions, or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.