

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.Dawn-Ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: MAX16-SPRT-FM
FOR: 2016+ NISSAN MAXIMA
EFFECTIVE: 2/18/2016

INSTALLATION PACKAGE INCLUDES:

- A) 3 – Paper Hole Locators
- B) 2 – Lock Washers
- C) 2 – Flat Washers
- D) 2 – M6-5/8 Screws
- E) 2 – Electrical Connectors
- F) Instruction Sheet

EXTRA TOOLS NEEDED:

- 1. 1/8" Drill Bit
- 2. Uni-Bit
- 3. Grease Pencil

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Remove Trunk Liner.
2. Center Sportwing® from left to right, and make sure the tip of the Sportwing® to the tip of the deck lid is 10 1/2" (As shown in **Diagram A**) on both sides. Make an outline around the Sportwing® with a grease pencil.
3. Next, remove the Sportwing® and place upside down on soft surface to prevent scratching and place the provided hole locators on the Sportwing® as shown in **Diagram B**.
4. Place Sportwing® back into outline marks made in Step #2. Tape the paper hole locators to the deck lid using masking tape. Then, remove Sportwing® so that the paper hole locators remain on the deck lid.
5. Next, drill through the hole locators using a 1/8" drill bit. Then, using a unibit, open the holes to 7/16".
6. Place Sportwing® back in outline and check to make sure that the holes line up. Feed brake-light wire through center hole. Then, remove red liner from Sportwing® to expose adhesive tape and place back onto deck lid.
7. While holding the Sportwing®, screw in the two (2) screws and washers provided.
8. Using the electrical connectors provided, connect the solid-white (hot) Sportwing® wire to the solid blue wire. Then, connect the white with a blue stripe (ground) Sportwing® wire to the solid white wire as shown in **Diagram C**.
9. After installing Sportwing®, clean up any metal shavings and wipe off grease pencil marks to complete the installation process. For any and all questions, please call us toll free at 1.800.548.4867.

DIAGRAM A



DIAGRAM B

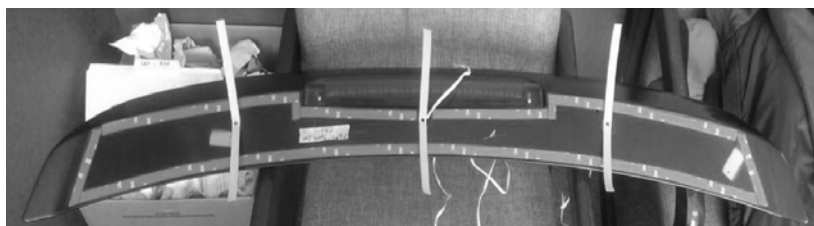


DIAGRAM C

