
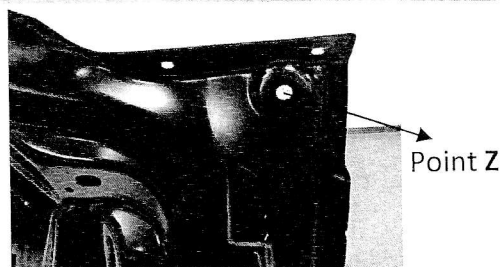


**MODEL NO: ABS482A
FORD MUSTANG 2024UP SPOILER**

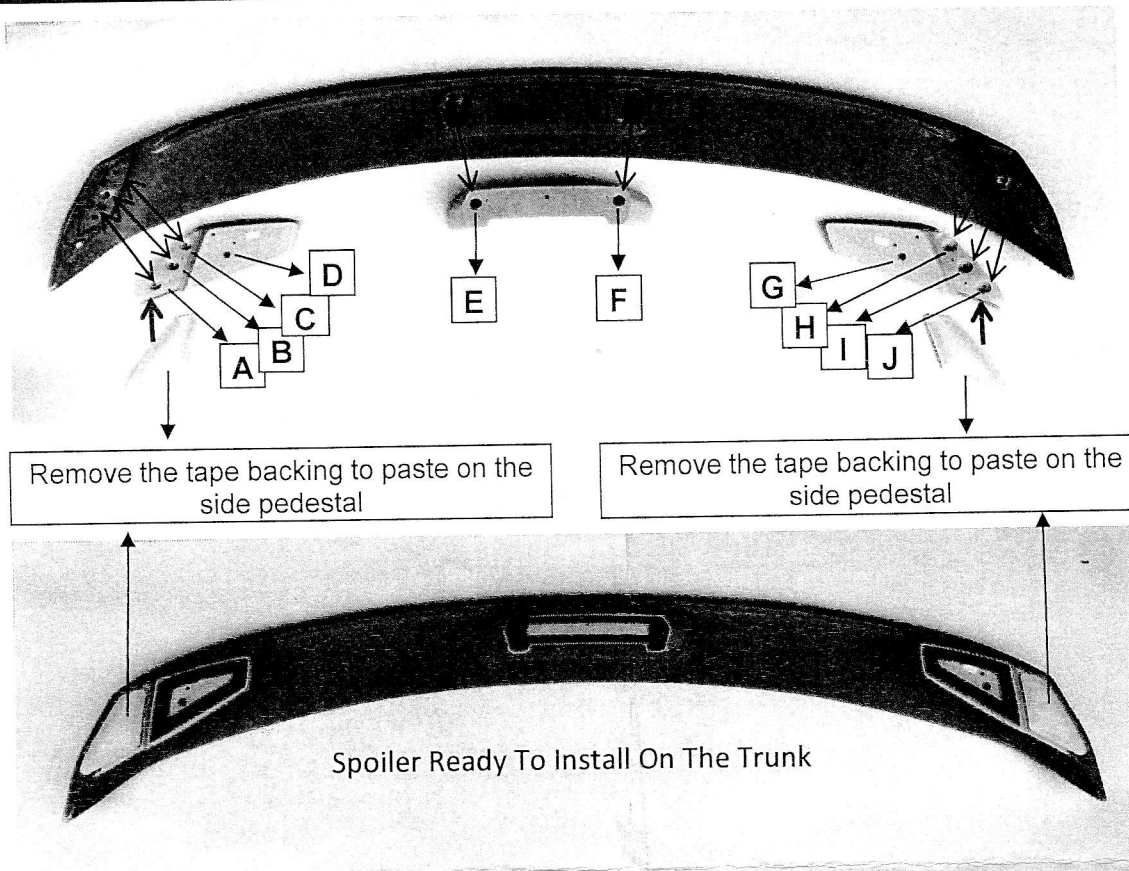

KIT CONTENTS & APPLICATIONS:-

Template	= 1 pc	(For D & G)
Screws M6 x 16 mm	= 6 pcs	(For A, B, C, H, I & J)
Screws Hexagon Flange M6 x 16 mm	= 4 pcs	(For E, F, D & G)
Washers	= 6 pcs	(For A, B, C, H, I & J)
Washers 1/4 x 1 x 19mm	= 2 pcs	(For D & G)

Brief Installation Procedures:-

1. Before install the spoiler on the truck, please tighten the pedestal spoiler on each side of spoiler with screws (A, B, C and H, I, J)
2. Option 1: Stick the Template (reversible) with the masking tape on the correct position of the Driver Side of trunk lid. (Repeat the same step on the Passenger side of trunk lid)
3. Option 2: Drill 8 mm holes at center Point Z of trunk lid for D & G (Point Z as per photo above). (Repeat the same step on the opposite side of trunk lid)
4. Finish tightening all the M6 screws to hold the spoiler securely to the trunk.


**LINE UP WITH
SIDE OF DECK LID**


**LINE UP WITH
SIDE OF DECK LID**

**MARK UP AND
DRILL 8mm HOLE**



**L.H.S.
TEMPLATE**



LINE UP WITH
SIDE OF DECK LID



LINE UP WITH
SIDE OF DECK LID

MARK UP AND
DRILL 8mm HOLE

R.H.S.
TEMPLATE