

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.Dawn-Ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: SOUL14-FM
FOR: 2014+ KIA Soul
EFFECTIVE: 10.24.2014

INSTALLATION PACKAGE INCLUDES:

- A. Alcohol Wipes
- B. 4 — Paper Hole Locators
- C. 4 — M-6-3/8" Screws
- D. 4 — Flat washers
- E. 4 — Lock washers
- F. 4- 3/4" hole plugs
- G. 1- Installation sheet

EXTRA TOOLS NEEDED:

- A. 1 — Grease pencil (*China Marker*)
- B. 1/8" (or similar) Drill Bit
- C. Uni-bit – Makes for a cleaner cut

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Clean area of deck lid where Sportwing® is to be installed using the provided alcohol wipes. Open Trunk and place a protective cover inside the trunk to capture any metal shavings.
2. Start by leaving the red lining for the tape on the Sportwing® and placing it on the designated spot of the deck lid. Then measure from the corner tip of the deck lid 2 1/2" to the tip of the Sportwing® and is also aligned from left to right. **As shown in Diagram A on the back of the sheet.** Then outline the Sportwing® with a grease pencil.
3. Place the Sportwing® upside down on a soft cloth that will not scratch the painted surface, then begin placing the four paper hole locators over each hole on the Sportwing®. Now place the Sportwing® back on to the marks made in step #2 and tape the paper hole locators onto the deck lid. **As shown in Diagram B on the back of the sheet.**
4. Next open deck lid and measure up 5" from the corner to underneath the little bit of the hole locator that is visible from the window and make a mark. Repeat on other side. Then measure from the corner of the black casing sideways 3/4" from left/right" which will also be under a visible hole locator and make a mark. **As shown in Diagram C on the back of the sheet.**
5. When you have made these marks in the correct places you can begin to drill. Using the 1/8" drill bit and holding the drill straight down at a 90° angle to the deck lid, drill a 1/8" hole through the top panel of the deck lid through all four-hole locators. Then do the same with the marks made in step #4 while going the second panel underneath. Next remove the hole locators and open all four pilot holes to 3/8". (**NOTE:** we suggest using a uni-bit for a cleaner cut).
6. Next open the deck lid and open the four 1/8" pilot holes to 3/4" (including the second panel underneath).
7. Apply Zinc Chromate Primer or touch-up paint on the edges of the four (4) 3/8" holes that you drilled in the hatch.
8. With the red lining still on the tape of the Sportwing®, place it on the deck lid and open to make sure your drilled holes align with the Sportwing®. If satisfied remove red lining and place the Sportwing® back in the exact spot and apply pressure.
9. Next open the deck lid and begin to screw in all four of the M-6 3/8" screws with lock and flat washers. After they are all secure plug the holes made on the inside of the deck lid with the provided 3/4" hole plugs. Clean up any metal shavings or debris and you are done! If you have any questions, or if you would like information about other quality Sportwing® products, please call the toll-free number at the top of this sheet. Thank you for choosing dawn enterprises Inc.

DIAGRAM A

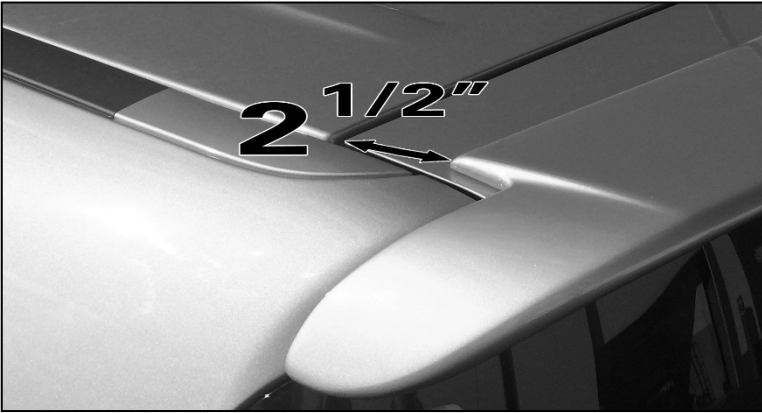


DIAGRAM B



DIAGRAM C

