

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.Dawn-Ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: SOUL20-FM
FOR: 2020+ KIA Soul
EFFECTIVE: 10/14/2021

INSTALLATION PACKAGE INCLUDES:

- A. Alcohol Wipes
- B. 2 — Paper Hole Locators
- C. 2 — M-6-1/2" Screws
- D. 2 — Flat washers
- E. 2- 3/4" hole plugs
- F. 1- Installation sheet

EXTRA TOOLS NEEDED:

- A. 1 — Grease pencil (*China Marker*)
- B. 1/8" (or similar) Drill Bit
- C. Uni-bit – Makes for a cleaner cut

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. Clean area of deck lid where Sportwing® is to be installed using the provided alcohol wipes. Open Trunk and place a protective cover inside the trunk to capture any metal shavings.
2. Start by leaving the red lining for the tape on the Sportwing® and placing it on the designated spot of the deck lid **as shown in Diagram A on the back of the sheet**. Then outline the Sportwing® with a grease pencil. The Sportwing® will sit directly behind the gap of the brake light on the top of the decklid.
3. Place the Sportwing® upside down on a soft cloth that will not scratch the painted surface, then begin placing the two paper hole locators over each hole on the Sportwing®. Now place the Sportwing® back onto the top of the decklid marks made in step #2 and tape the paper hole locators onto the deck lid. **As shown in Diagram B on the back of the sheet**.
4. Remove the Sportwing® from the decklid, keeping the hole locators on the decklid. Using the 1/8" drill bit and holding the drill straight down at a 90° angle to the deck lid, drill a 1/8" hole through the top panel of the deck lid through both hole locators. Then it will be necessary to drill through the secondary panel on the underside of the decklid to gain access to the hole made on top of the decklid. Next, remove the hole locators and open all four pilot holes to 3/8". (**NOTE:** we suggest using a uni-bit for a cleaner cut).
5. Next open the deck lid and open the four 1/8" pilot holes to 3/4" (including the second panel underneath).
6. Apply Zinc Chromate Primer or touch-up paint on the edges of the four (4) 3/8" holes that you drilled in the hatch.
7. With the red lining still on the tape of the Sportwing®, place it on the deck lid and open to make sure your drilled holes align with the Sportwing®. If satisfied remove red lining and place the Sportwing® back in the exact spot and apply pressure.
8. Next, open the deck lid and begin to screw in both of the M-6 1/2" screws with lock and flat washers. After they are all secure, plug the holes made on the inside of the deck lid with the provided 3/4" hole plugs. Clean up any metal shavings or debris and you are done! If you have any questions, or if you would like information about other quality Sportwing® products, please call the toll-free number at the top of this sheet. Thank you for choosing dawn enterprises Inc.

DIAGRAM A

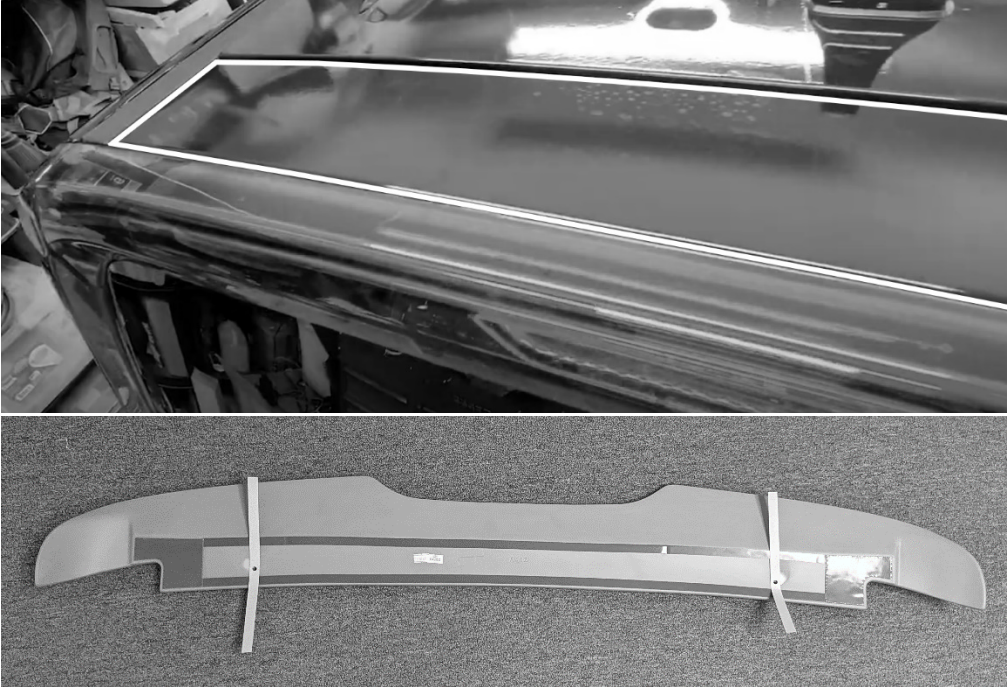


DIAGRAM B

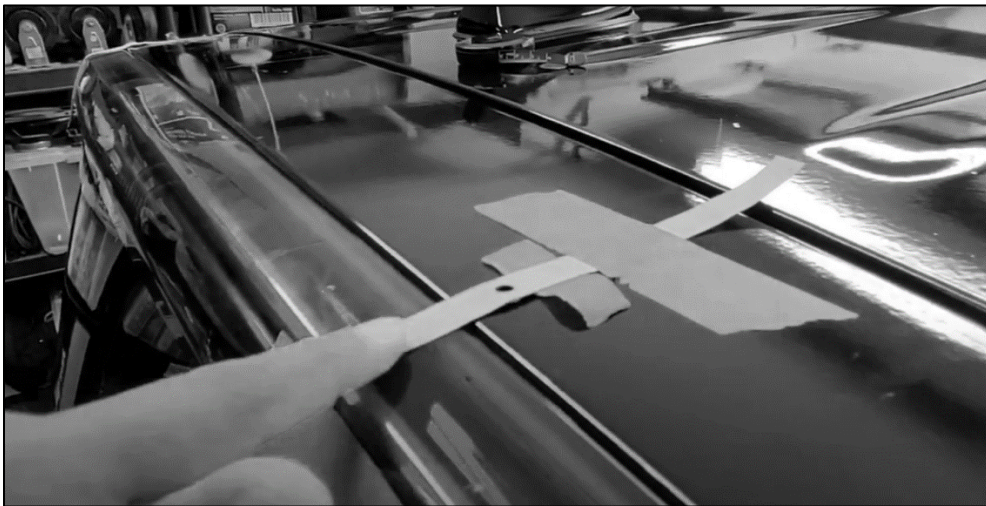


DIAGRAM C

