

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: VERANO12-FM
FOR: 2012 & UP Buick Verano
EFFECTIVE: 13 JUNE 2012

INSTALLATION PACKAGE INCLUDES:

- A) 2 – Paper Hole Locators
- B) 2 – M-6 x 1/2" Mounting Screws
- C) 2 – Lock Washers
- D) 2 – Flat Washers
- E) Instruction Sheet


EXTRA TOOLS NEEDED:

- 1. 1/8" or similar Drill Bit
- 2. #1 Uni-bit
- 3. Phillips Screwdriver


PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

With the car and part in natural sunlight, check for paint match and flaws before installing!

1. **REMOVE TRUNK LINER!** Close the trunk. **See Diagram.** Along the driver's side, measure down 10 3/8" from the tip of the trunk lid where it meets the rear window glass, back towards the rear of the car and make a mark with a grease pencil. Repeat on passenger side.
2. Leaving red liner on bottom of mounting area, place the Sportwing® on the marks made in Step #1. **See Diagram below.** As you face the rear of the car, the front tips of the Sportwing® will rest on these marks. Center the Sportwing® exactly from left to right. Using a yellow grease pencil, completely outline the Sportwing®. Remove the Sportwing® from the trunk.

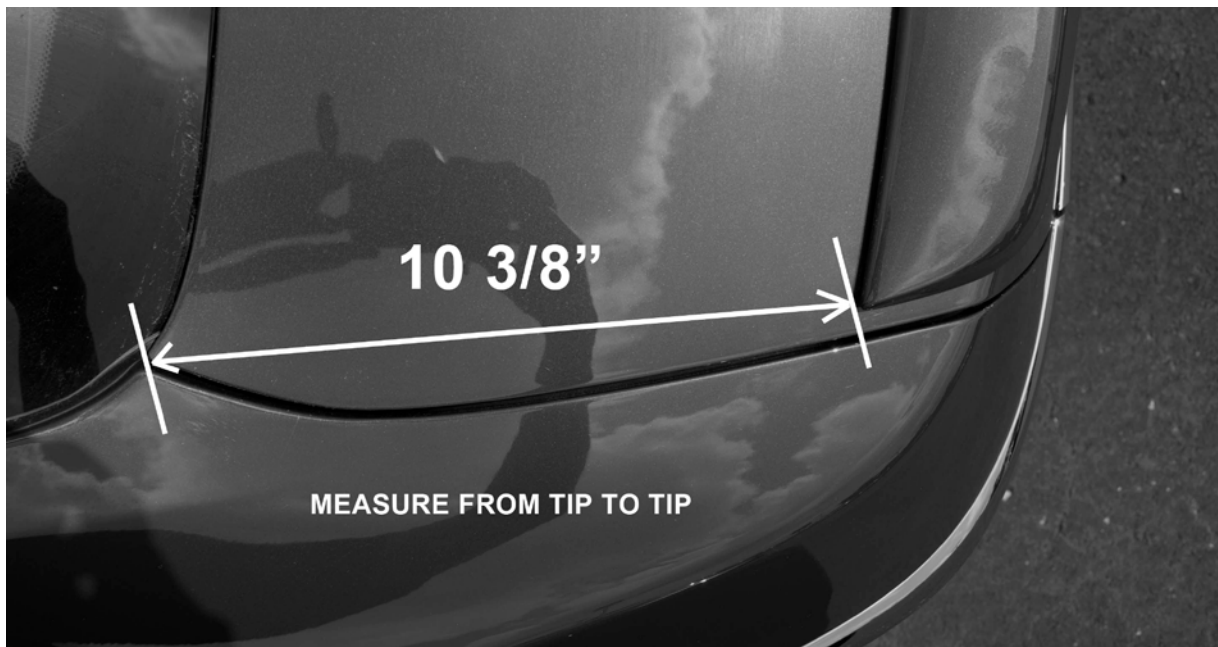

3. Next, place the Sportwing® upside-down on a soft cloth so you do not scratch the painted top surface. Using two (2) paper hole locators, provided, remove the liner from the hole locator to expose the adhesive. Place the cut out hole in the hole locator centered exactly over the two (2) threaded sleeves of the fastening area of the Sportwing®. Make sure that the hole locators do not move (**NOTE: a small piece of masking tape is helpful in holding hole locators in place**) carefully place the Sportwing® back onto the outline marks on the deck lid, that you made in Step #2.

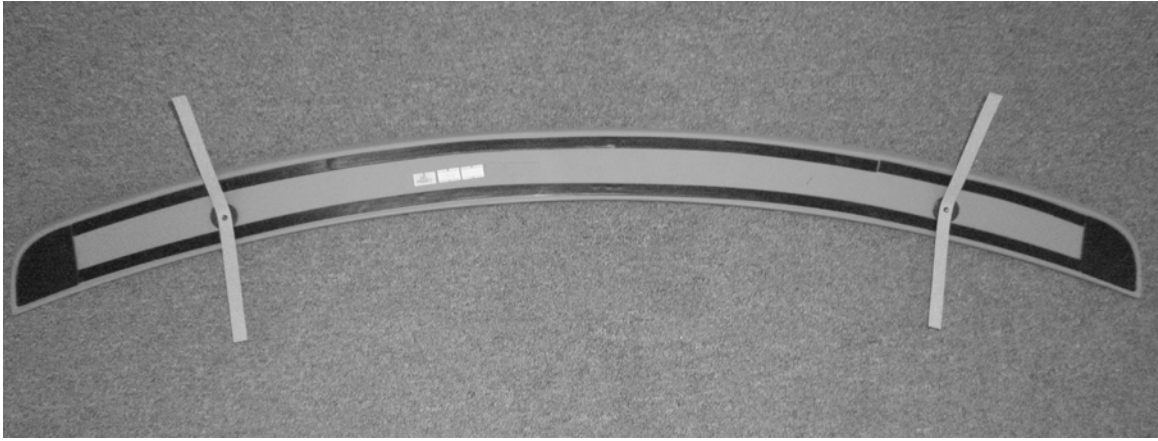

4. When Sportwing® is centered on outline marks made in Step #2, and making sure that the two (2) paper hole locators did not move, tape the two (2) hole locators to the deck lid using masking tape. Next, carefully lift the Sportwing off the deck lid, leaving the hole locators taped to the deck lid.



5. Using a 1/8" or similar drill bit, drill a 1/8" pilot hole in the exact center of the two (2) hole locators. Remove the hole locators and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the two (2) 1/8" pilot holes to 3/8".
6. Apply Zinc Chromate Primer or Touch-Up Paint on the edges of the two (2) 3/8" holes that you drilled in the deck lid.
7. Remove the plastic liner from the double-sided tape on the bottom of the mounting area of the Sportwing® and lightly place the Sportwing® back onto the outline marks that you made in Step #2. Open the deck lid and check to see that the two (2) 3/8" holes that you made in the deck lid align with the two (2) threaded sleeves of the mounting area of the Sportwing®. If satisfied with the alignment, press the Sportwing® firmly in place. If the holes do not align, you will need to reposition the Sportwing® until satisfied with the alignment. Using fastening screws, with lock washers and flat washers provided, install screws into the two (2) threaded sleeves of the mounting area. Tighten the two (2) screws. **DO NOT OVER TIGHTEN**. Using a soft cloth press Sportwing® onto deck lid so that mounting tape makes contact with deck lid.
8. Clean up any metal shavings and you are done. Please call the TOLL FREE number at the top of this sheet if you have any questions or if you would like information about other quality Sportwing products®. Thank you for choosing Dawn Enterprises Inc.