

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125

Phone: (216) 447-1777 or (800) 548-4867

Fax: (216) 447-3416

www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: BEET12

FOR: 2012 & Up Volkswagen Beetle

EFFECTIVE: 10 April 2012


INSTALLATION PACKAGE INCLUDES:

- A) 4 – Paper Hole Locators (*for the fastening holes*)
- B) 4 – M-6 x $\frac{3}{4}$ " Mounting Screws
- C) 4 – Flat Washers
- D) Adhesive Pads (*for an unpainted Sportwing®*)
- E) Instruction Sheet

IMPORTANT! PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION


1. Open the trunk, **remove the trunk cover** and place a protective cover inside the trunk to capture any metal shavings.
2. Remove the trunk panels, as shown in Diagram A below.

Diagram A

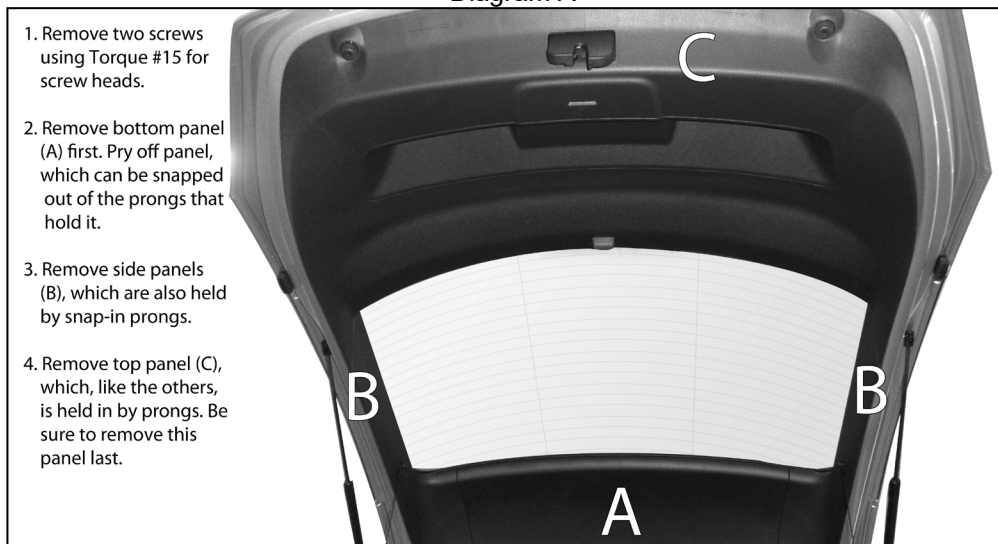


2. Close the deck lid. Clean the surface of the deck lid where the Sportwing® will be installed.
3. Set the Sportwing® onto the rear area of the deck lid where the Sportwing® will be seated into position. Center the Sportwing® left to right. Using a grease pencil, outline each mounting area. These marks will allow you to place the Sportwing® back onto the desired position later in the installation. **See Diagram B below.**

Diagram B

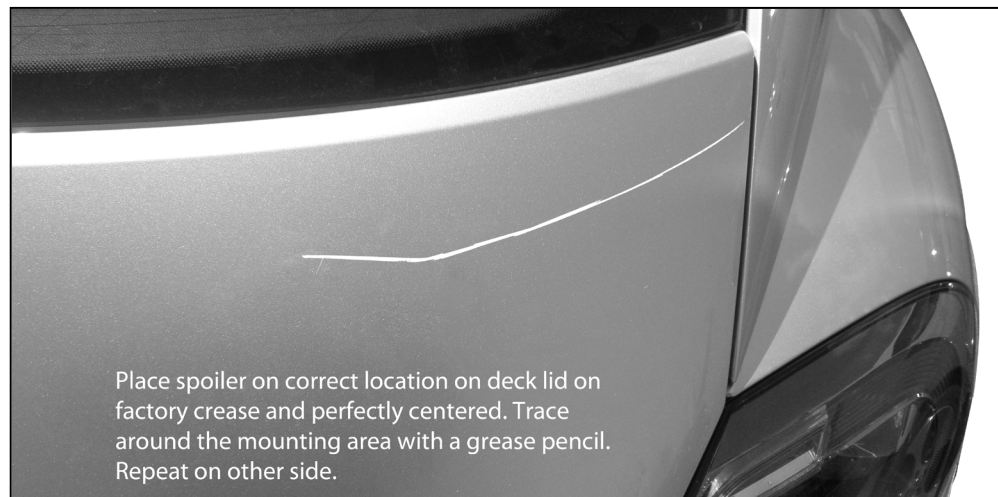

4. Remove the Sportwing® from the deck lid and place it upside-down on a soft cloth on the ground or your work surface. The soft cloth is necessary to protect the paint from getting scratched. Remove the liner from the four provided paper hole locators to expose adhesive. Perfectly center each hole locator over each mounting hole on the bottom of the Sportwing® (**NOTE: a small piece of masking tape helps with holding the hole locators in place**). See Diagram C below.

Diagram C

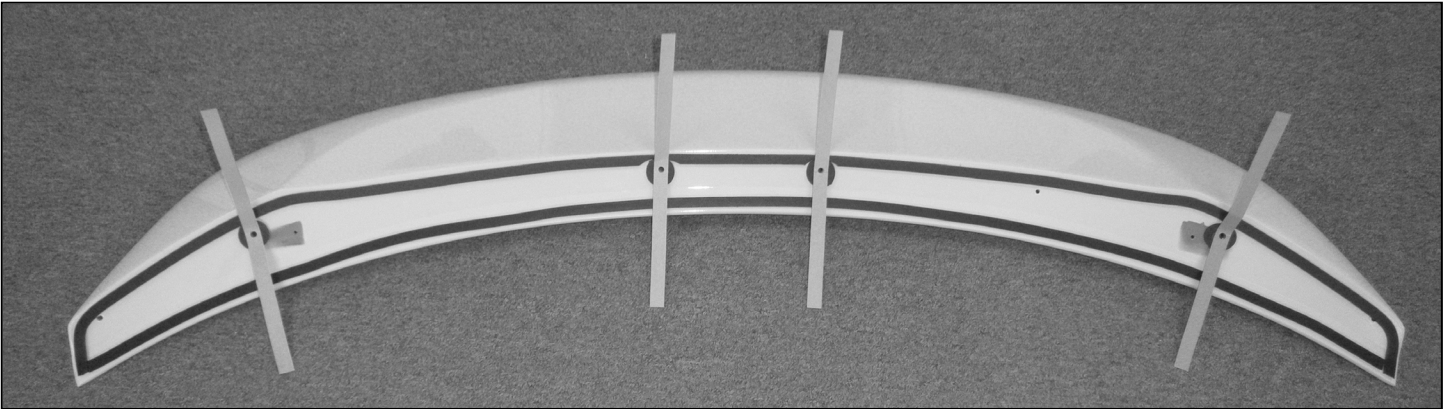

5. Carefully flip the Sportwing® over, leaving hole locators still fastening to the threaded sleeves. Make sure that none of the hole locators have moved. Place the Sportwing® back onto the outline marks that you made in Step #3.

Next, when Sportwing® is in alignment with outline marks, tape the hole locators onto the deck lid using masking tape. **See Diagram D below.** When the four (4) hole locators are taped in place, carefully lift the Sportwing® up off of the deck lid, leaving the hole locators taped on the deck lid. Set the Sportwing® aside.

Diagram D



6. Using a 1/8" or similar drill bit, drill a pilot hole in the exact center of each of the four (4) hole locations. After drilling pilot holes, remove hole locators. Next, using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) you will need to open the four (4) pilot holes to 3/8".
7. Apply zinc chromate primer or touch up paint on the edges of the four (4) 3/8" holes that you drilled in the deck lid.
8. Open the deck lid and, holding the Sportwing®, *place the Sportwing® back onto the outline marks that you made in Step #3*). Make sure that the 3/8" mounting holes align with the threaded sleeves of the mounting area.
9. Using mounting screws, provided, with lock washers and flat washers, install screws into threaded sleeves of all four (4) mounting holes and partially tighten all four (4) mounting screws. After all four (4) are started, tighten evenly until tight. **DO NOT OVER TIGHTEN.**
10. Clean up any metal shavings that might have fallen into the trunk and you are done. Please call the TOLL FREE number at the top of this sheet if you have any questions or would like information about other quality Sportwing products. Thank you for choosing Dawn Enterprises Inc.

DISCLAIMER: DAWN ENTERPRISES, INC. IS NOT RESPONSIBLE FOR ANY DAMAGE CAUSED BY IMPROPER INSTALLATIONS.