

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125

Phone: (216) 447-1777 or (800) 548-4867

Fax: (216) 447-3416

www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: CUS-CAM12

FOR: 2012 & Up TOYOTA CAMRY

EFFECTIVE: 25 January 2012


INSTALLATION PACKAGE INCLUDES:

- A) 2 – 3/4" Mounting Screws
- B) 2 – Lock Washers
- C) Template
- D) Adhesive Pads (for an unpainted Sportwing®)
- E) Instruction Sheet
- F) 2 – 5/8" Body Plug

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION


1. Along the driver's side, measure 11 3/4" from the tip of the trunk lid back toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side, and flip template over for passenger side. Place template on deck lid using the 11 3/4" mark. See Diagram A below.

Diagram A

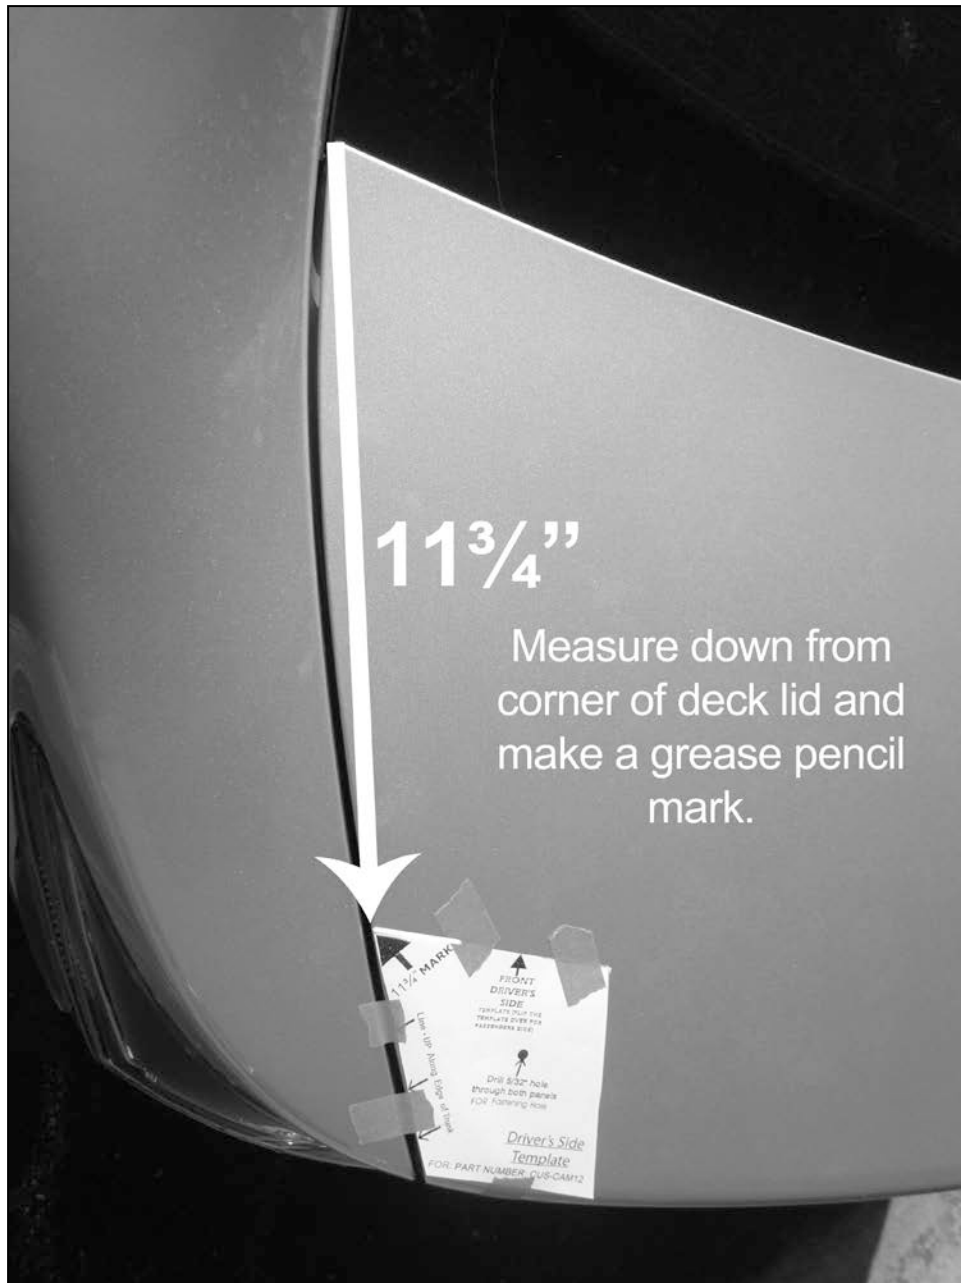

2. Leaving the paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rest on the marks. Center the Sportwing® from left to right along these marks. Using a yellow grease pencil, outline both outer mounting feet. Set the Sportwing® aside.
3. See template for drilling instructions. Using a 5/32" drill bit, drill down through the spot indicated on the template. Be sure to drill through both panels (top and secondary). Repeat procedure on passenger side by flipping template over.
4. Open the trunk. Using a 5/8" hole saw, open up the pilot holes drilled in the secondary panel to be 5/8" wide. This will give you access for your socket wrench later. Refer to Diagram B below.

Diagram B

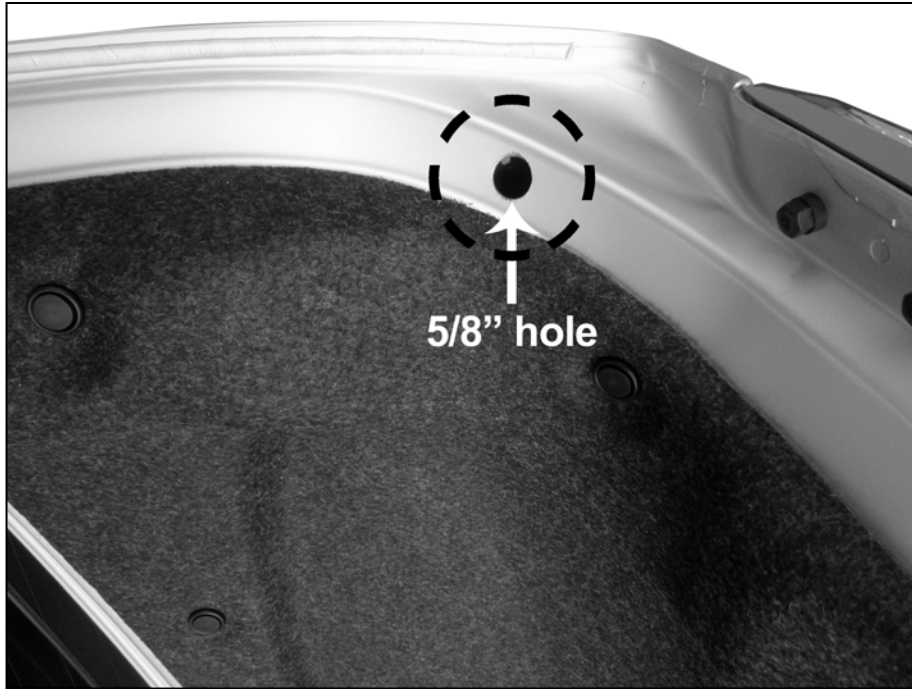

5. Close the trunk and remove the paper liner from the bottom of the mounting feet. Place the Sportwing® back onto the outline marks made in Step #2 and press firmly into place.
6. Open the trunk. Using a 5/32" drill bit and drilling from inside of the trunk, drill up into the bottom of the mounting foot 1/2" using the mounting hole drilled in Step #3 (**NOTE: when drilling, we insist you use a drill stopper to prevent from drilling up through the top of the Sportwing®**). Using a ratchet with 5/16" socket, install mounting screw with lock washer and tighten firmly. **DO NOT OVER TIGHTEN!** Repeat procedure on other side.
7. Clean up any metal shavings that might have fallen into the trunk, and you are done. The installation should take no longer than 30 minutes. If you have any questions, or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.