

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.Dawn-Ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: GEN2DR
FOR: 2010-2011 Hyundai Genesis 2 Door
EFFECTIE: December 23, 2013

INSTALLATION PACKAGE INCLUDES:

- A) 2 – M-6 x 8mm Mounting Screws (For A&C)
- B) 2 – M-6 x 16mm Mounting Screws (For B&D)
- C) 6 – Flat Washers (2pcs for A&C, 1 pc for B&D)
- D) 2 – Electrical Connectors
- E) 1 – 3/8" Wire Harness
- F) 4 – Hole Locators
- G) Instruction Sheet

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **REMOVE TRUNK LINER, then close trunk lid.** Starting on the driver's side, measure down 10 5/8" from the tip of the trunk lid back toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side. **See Diagram A.**
2. Place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the mark. Center the Sportwing® from left to right along the marks made in Step #1. Using a grease pencil, completely outline each mounting foot (**NOTE: by outlining the mounting feet with a grease pencil, you will be able to place the Sportwing® exactly onto your desired position after removing the paper liner off the mounting feet tape**). Set Sportwing® aside.
3. Place the Sportwing® upside down on a soft cloth that will not scratch the painted surface. Find the four (4) provided paper hole locators and remove their paper backing to expose the adhesive. Locate the four (4) mounting holes on the bottom of the Sportwing® and place the cut-out hole locators centered exactly over these four fastening holes. **See Diagram B on back of sheet.** A piece of masking tape can hold the hole locators in place. Making sure the hole locators do not move, flip the Sportwing® over and place it back onto the grease pencil marks you made in Step #2.
4. Using a 1/8" drill bit or similar size, drill a 1/8" pilot hole through the exact center of the hole locations marked on the hole locator through the top panel of the deck lid only. After drilling three (3) holes on the hole locator, and using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) you will need to open all three (3) 1/8" pilot holes to 7/16", only drilling through the top panel of the deck lid. Touch up edges of 7/16" holes using touch up paint. Repeat procedure on passenger side.
5. Open the deck lid. **See Diagram C on back of sheet.** Using a uni-bit, open the factory 3/8" holes in brace between panels to 5/8" or 11/16". Opening these holes will allow you access to the top panel of the deck lid later in the installation. Repeat procedure on passenger side (**NOTE: be careful when opening holes in factory brace so that the uni-bit does not touch the top panel of the deck lid**).
6. Feed the brake light wires of the Sportwing® through the harness hole that you made in Step #5 (**NOTE: be careful not to crimp the brake light wires as you position the Sportwing® back onto the outline marks that you made in Step #2**). Lightly tack the Sportwing® onto the outline marks so that if the threaded sleeves on the bottom of the mounting feet do not align with the 7/16" holes that you made in the deck lid, you will be able to re-align Sportwing® until satisfied with alignment. When satisfied with the alignment, press Sportwing® firmly into place.
7. Open deck lid and using mounting screws, provided, with lock washers and flat washers (**NOTE: when starting screws into threaded sleeves, we suggest using a magnetic screw driver tip or use butle tape to hold screw on screw driver tip until screw is started into threaded sleeve. Do not allow screw to fall between panels**). Install four (4) mounting screws with lock washers and flat washers into the threaded

sleeves of mounting feet. When all four (4) screws are started, tighten evenly until tight. Do not over tighten.

8. Run the Sportwing® harness wires towards the drivers' side trunk hinge and using the 3/8" wire harness, provided, insert the Sportwing® wires inside of the harness and neatly tape harness along drivers' side trunk hinge (**NOTE: be sure to leave enough slack to allow opening and closing of trunk**). Next, run the Sportwing® brake light wires toward the drivers' side taillight assembly. Using electrical connectors, provided, connect the white (hot) wire of the Sportwing® to the green wire of ROUND taillight socket. Next, connect the white wire with blue stripe (ground) of Sportwing® to the black wire of same round taillight socket. Step on the brake pedal to test connections.
9. Clean up any meal shavings and you are done. Please call the TOLL-FREE number at the top of this sheet if you have any questions, or if you would like information about other quality Sportwing products. Thank you for choosing Dawn Enterprises, Inc.

DIAGRAM A

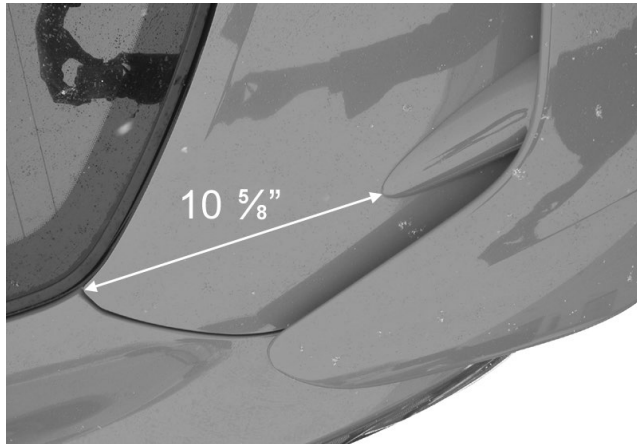


DIAGRAM B



DIAGRAM C

DRIVERS' SIDE
Factory Brace (between panels)
Open the factory 3/8" holes to 5/8" or 11/16"
using a uni-bit (**NOTE: we suggest using a uni-bit
for a cleaner cut**). Opening these holes will allow
you access to the top panel of the deck lid when
installing mounting screws later in the
installation.

