

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: MUS05
FOR: 2005 + FORD MUSTANG
EFFECTIVE: 10.24.07

INSTALLATION PACKAGE INCLUDES:



- A) 2 – M – 6 x 1" longer screws for rear mounting holes
- B) 2 – 5/8" shorter screws for front mounting holes
- C) 4 – Lock Washers
- D) 4 – Flat Washers
- E) 3/4" Hole Caps for 3/4" holes made in secondary panel
- F) Template
- G) Adhesive Pads (*for an unpainted Sportwing®*)
- H) Instruction Sheet

EXTRA TOOLS NEEDED:


- 1. 5/32" Drill Bit
- 2. 3/4" Hole Saw

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **Diagram on back of sheet.** Starting on the drivers' side, measure down 10" from the tip of the trunk lid back toward the rear of the car and place a mark with a grease pencil. Repeat procedure on other side.
2. Leaving the paper liner on the bottom of mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the mark. **See Diagram A below.** Next, exactly center the Sportwing® from left to right. Outline both mounting feet with a grease pencil.
3. Set the Sportwing® aside and position the template provided on the drivers side outline made in Step #2. Using a 5/32" drill bit or similar, drill down through the spots indicated on the template for your mounting holes through the top panel of the deck lid for the front hole on template. When drilling for the rear fastening hole on template you will need to drill through the top panel of the deck lid and continue drilling through the secondary panel of the deck lid (**NOTE: when drilling through the secondary panel, slightly lift deck lid do you do not drill into the rain channel are of the trunk**). Next, open deck lid and using a 3/4" hole saw, open the pilot hole that you made in the secondary panel to 3/4". 3/4" black hole caps have been provided for these holes upon finishing. Repeat on passenger side by flipping template over. Next, using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) you will need to open the 5/32" pilot holes that you made in the top panel of the deck lid to 3/8", **as shown in Diagram B on back of sheet.**
4. Peel the paper liner from the bottom of the mounting feet and lightly place the Sportwing® back onto the outline marks that you made in Step #2. Holding onto the Sportwing®, open deck lid to make sure that the holes in the deck lid align with the holes in the bottom of the Sportwing®. If not, lift the Sportwing® and re-align so all holes are aligned. Install mounting screws with lock washer and flat washer into the mounting holes in the bottom of the mounting foot (**NOTE: use the LONGER screws for the REAR mounting holes. Use the SHORTER screws for the FRONT mounting holes**). Tighten all four screws evenly. **DO NOT OVER TIGHTEN.**
5. Clean up any metal shavings that might have fallen in the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

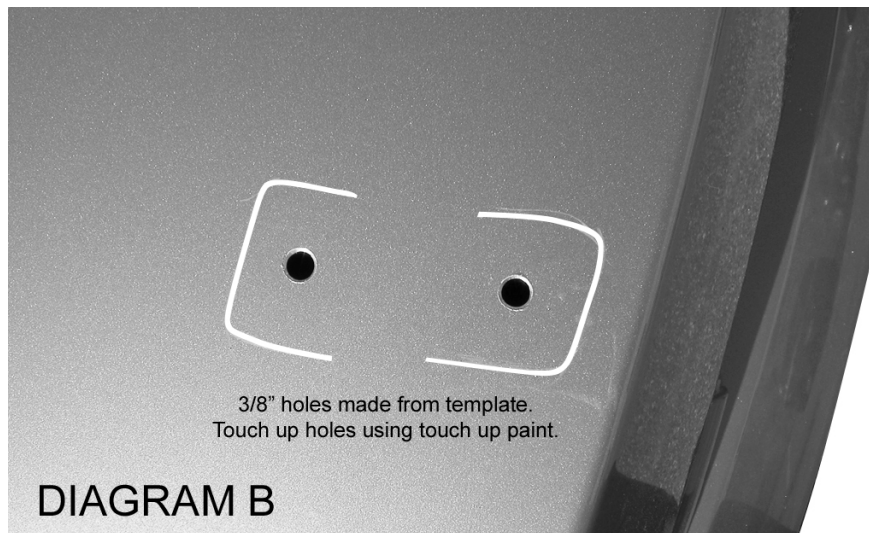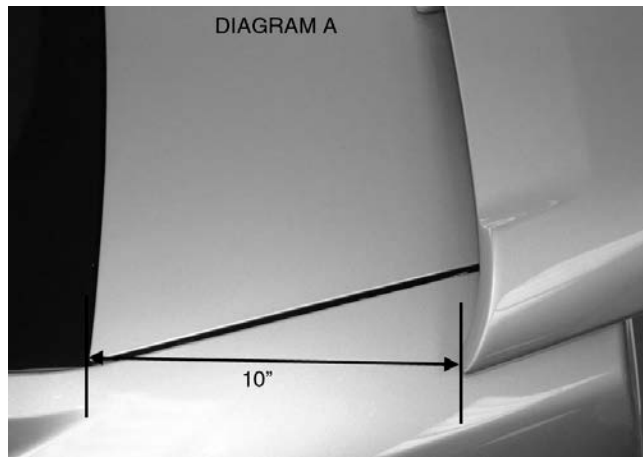

Outline both mounting feet using grease pencil. Using template, provided, drill $5/32$ " or similar pilot hole on designated spots on template (**NOTE: when drilling rear most hole on template you will need to continue drilling through secondary panel of inner deck lid**). Next, using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) open the $5/32$ " pilot holes on top panel to $3/8$ ", as shown above).

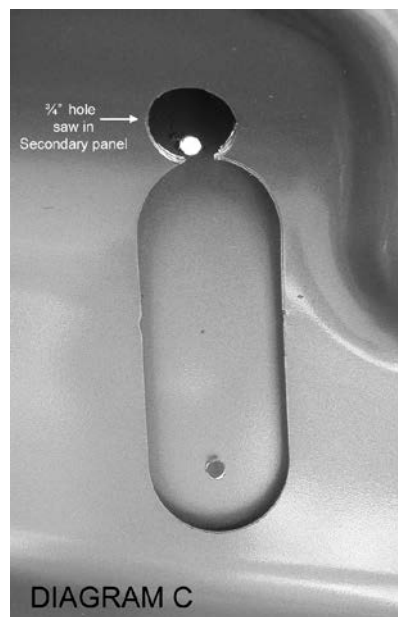

Open deck lid and using a $3/4$ " hole saw, open $5/32$ " pilot hole that you made in secondary panel to $3/4$ " Black $3/4$ " hole caps have been provided for these holes upon finishing.